

INSTRUCTIONS/CAUTIONS FOR LIGHT /acoustic FOIL - cod NASYSP09.1

This plastic foil has a special switch on the point and is used as stand alone weapon as epee mode.

To use it the ON/OFF switch must be placed in ON position .


The foil is available with red or green guard light with 2 different sounds one for each light colour for a better scoring identification.

The standby current is zero. Anyway when the foil is not used, is better to place the ON/OFF switch in OFF position.

The weapon NASYSP09.1 has n 1 alkaline battery 12 Vdc 53mAh that can be placed in the handle of foil or in the guard

a) Battery replacement in case it is placed in the handle of the foil

-In order to insert or replace the battery in the foil handle extract the holding battery using a small screwdriver as in the picture above, placing attention to the polarity (+ and – poles).

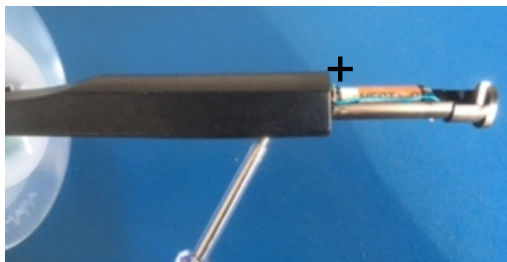

b) Battery replacement in case it is placed in the guard

To change the battery unscrew the screw visible on plastic guard cover, take out the empty battery and insert the new battery placing attention to the polarity (+ and – poles). Then put back the guard cover fastening it in the guard with the screw.